



Installation Manual Double DIN Kit

APF-F381320-10VW

APF-F391320-10VW

• Seat Leon 2010->

• VW Caddy (Type 2K)

• VW Golf V

• VW Golf VI

• VW Passat (Type 3C)

• Skoda Fabia 2007->

• Skoda Roomster 2006->
(Roomster only with OEM Radio)


• VW Passat CC

• VW Scirocco III

• VW Touran

Compatible with these Alpine double DIN devices

Alpine Navigation

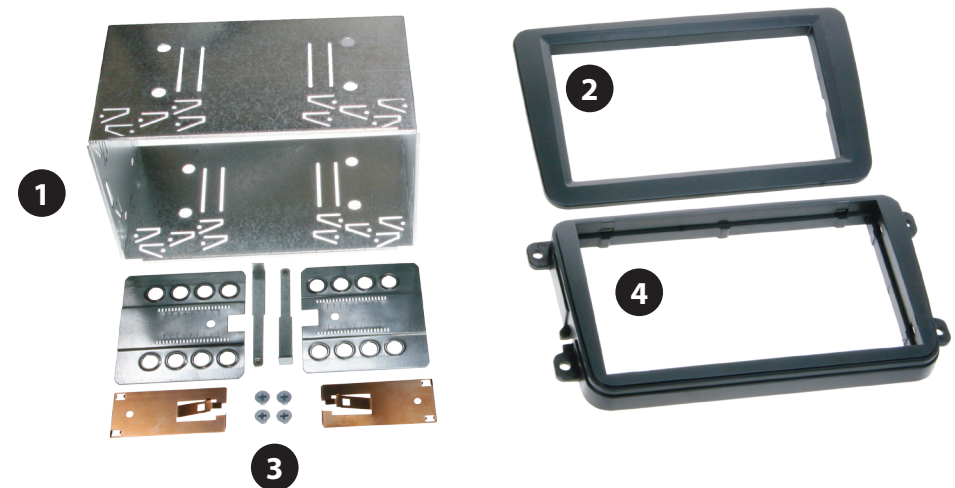

Double DIN Kit contents:

• Metal Frame (1)

• Facia Plate (2)

• Installation Kit (3)

• Mounting Frame (4)

Installation Manual Double DIN Kit



VW Golf V only:

Pull up the aircone unit (fixed by clips). Remove two Torx (TX20) screws (see arrows) which become visible.




1. Remove the original trim frame, surrounding the radio (fixed by clips).




2. Remove the 4 Torx (TX20) screws (These screws will be used again later).


Remove the OEM head unit.

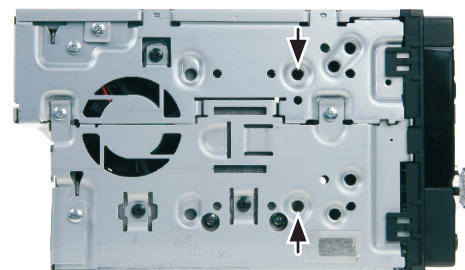

Mount the metal brackets with the double DIN head unit

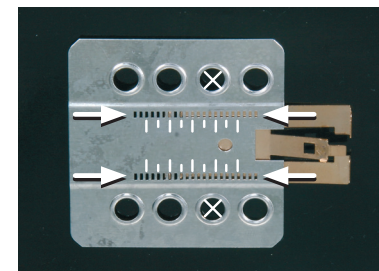

The position of the copper coloured holder can be adjusted to your needs for perfect fit (see sample)

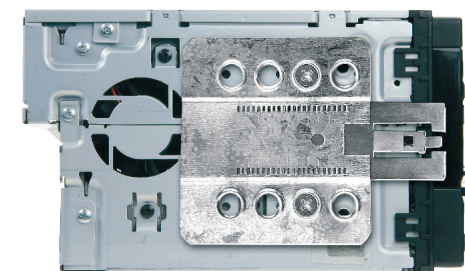

6. Connect all wires and fix the Alpine Double DIN head unit with the original Torx (TX20) screws (which have been removed in step 2)
7. Reinstall everything in reverse order to finish installation.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.